

Monitoring




Installation configuration



Update



Remote control settings

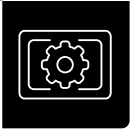


next interface quickstart

Call our specialists **+41 27 205 60 80**
or visit **studer-innotec.com/support**


Studer Innotec SA
rue des Casernes 57
1950 Sion, Switzerland
info@studer-innotec.com

Check the next3 technical documentation online:
technext3.studer-innotec.com




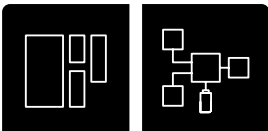


Dashboard / Synoptic

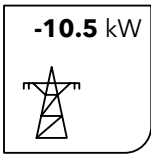

Grid

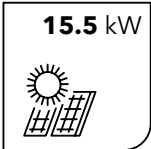


Solar

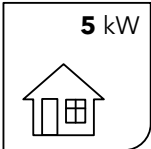


AC loads




Device

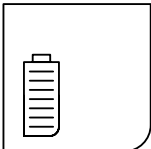

Battery

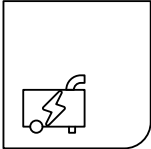


Genset

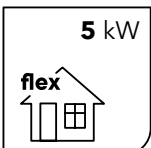


FlexLoads


Info

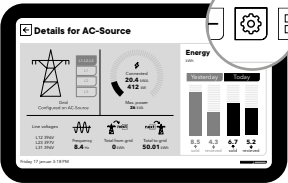




















Settings

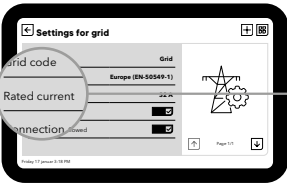

Setting description

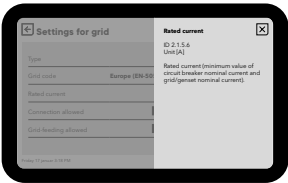

Adjust value

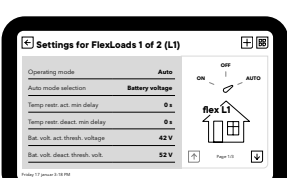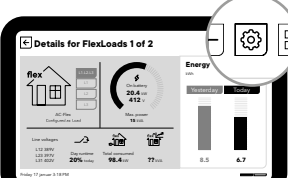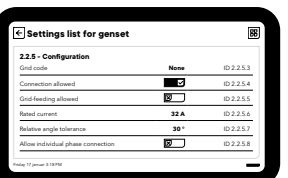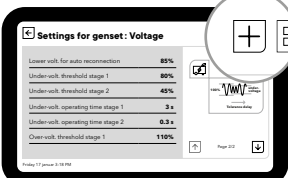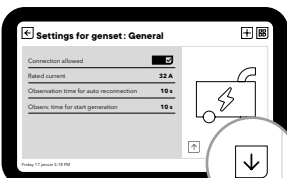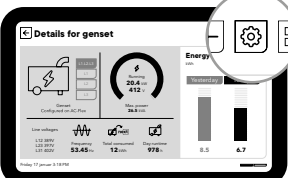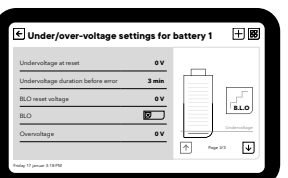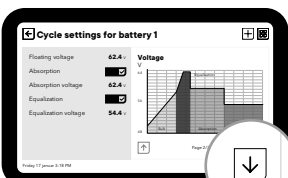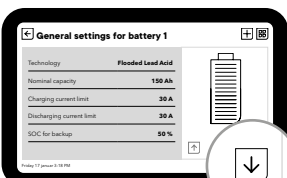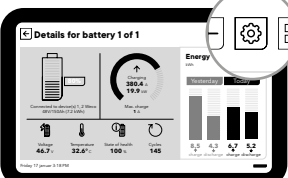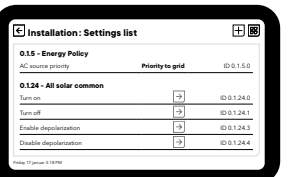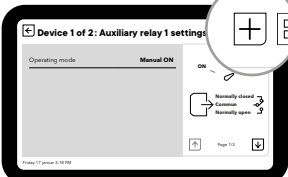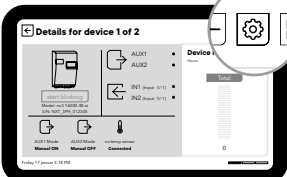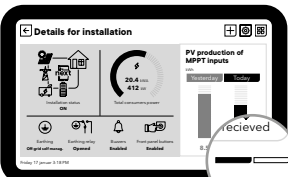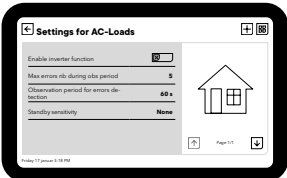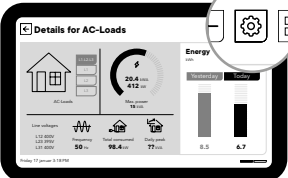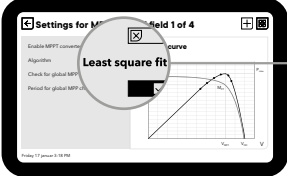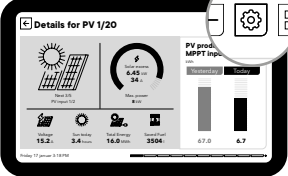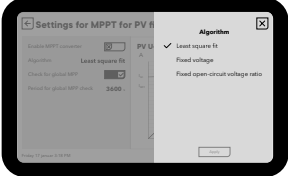

settings configuration



more details



main menu always accessible with

