



Monitoring






Installation configuration

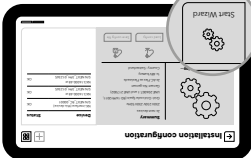

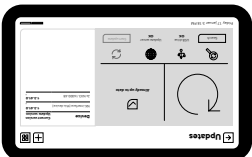


Update



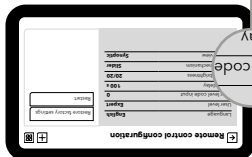

Remote control settings

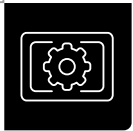




next interface quickstart




Check the next3 technical documentation online:
technext3.studer-innotec.com


Call our specialists **+41 27 205 60 80**
or visit **studer-innotec.com/support**

Studer Innotec SA
rue des Casernes 57
1950 Sion, Switzerland
info@studer-innotec.com

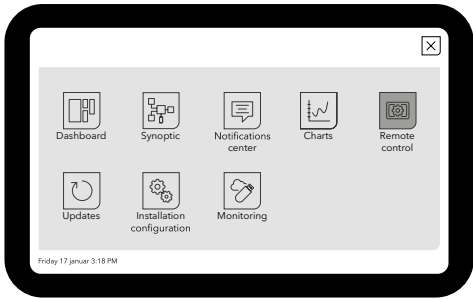


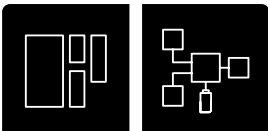


Dashboard / Synoptic

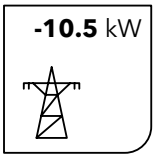

Grid

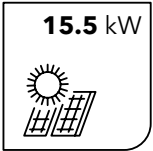


Solar

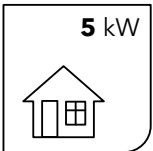


AC loads




Device

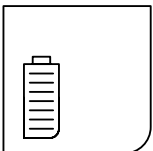























Battery

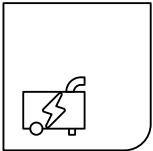

Genset

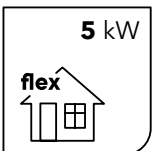

FlexLoads

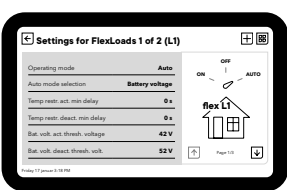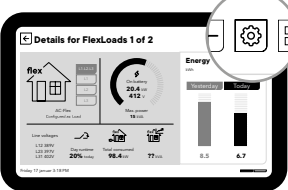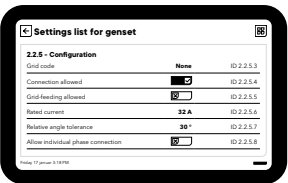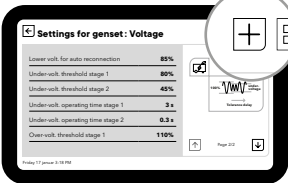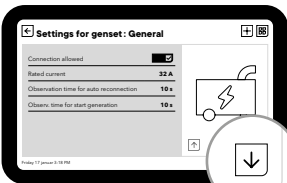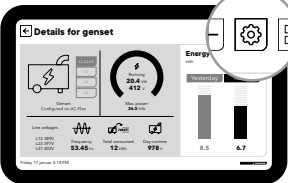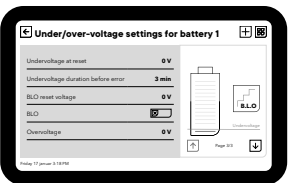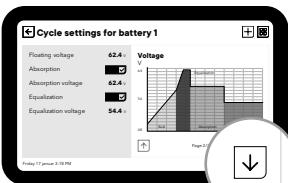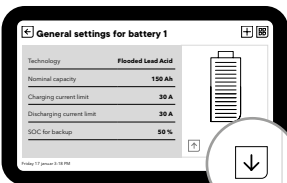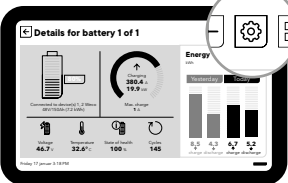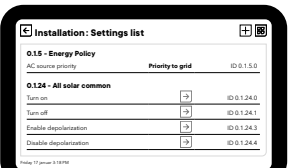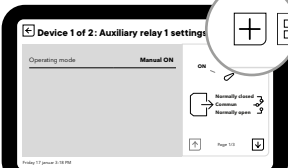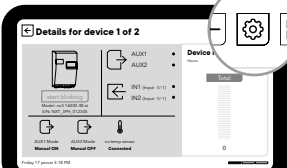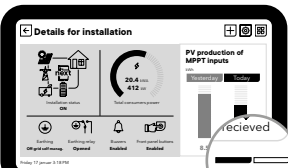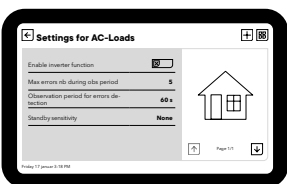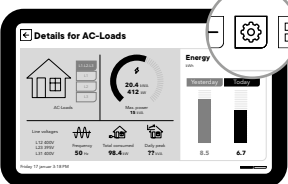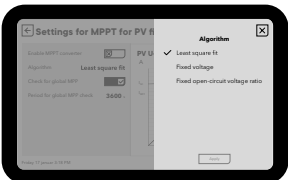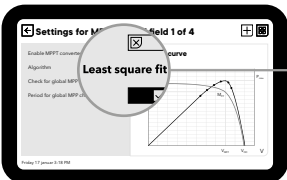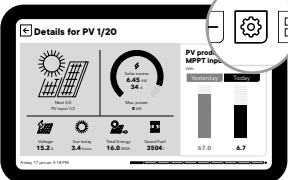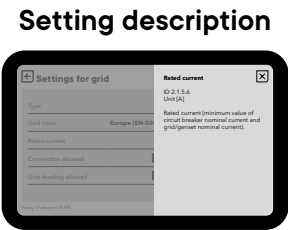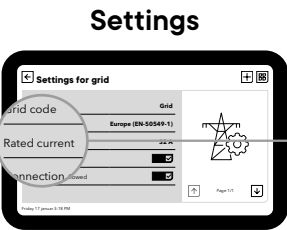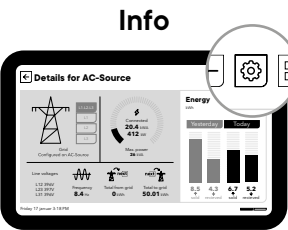

settings configuration



more details



main menu always accessible with

